

User Guide ASSA ABLOY PIN

1	2	3	4	5
Choose a free locker. Either a locker with an open door or a lock where the thumbturn is pointing right or left.	Turn the thumbturn into locked position.	To lock: Enter your own personal 4-digit code. The lock confirms being locked by 3 red flashes.	To open: Re-enter your personal code. The lock confirms by 3 green signals and opens.	Turn the thumbturn into open position.



ASSA ABLOY