




- Use the supplied template to determine the correct location and size of
 mounting holes for both the door and frame header. Ensure that the
 door opens away from the EML. In the case of a single door, the EML
 is positioned as close as possible to the vertical section of the door
 jamb.
- Loosely install the mounting plate using two of the supplied philips head mounting screws in the elongated slots. Attach the EML to the mounting plate.

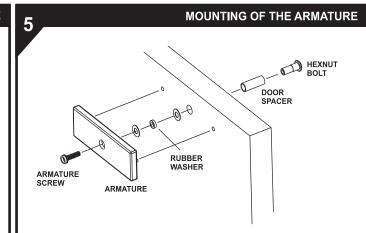

- Align the armature plate on the door using sight or the template supplied.
- Mark and drill holes then mount the armature to the door. Make sure
 that the armature plate is not over tightened and that it is installed as
 shown in the following diagram. The armature plate must be free to self
 align with the door.

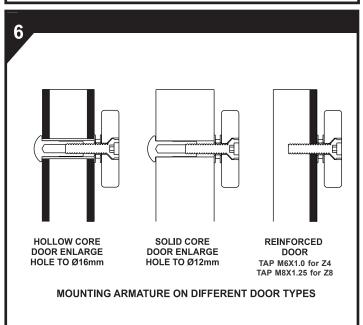

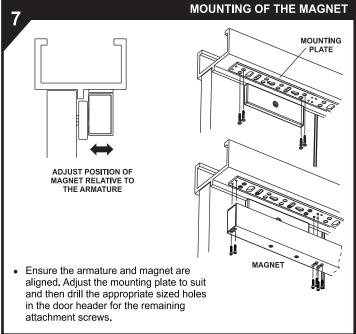

Assemble Glass Door brackets as shown. MOUNTING ON GLASS DOORS DOOR HEADER MAGNET ARMATURE FIXTURE STEEL PLATE RUBBER PLATE GLASS DOOR

ELECTRICAL CONNECTION

- Connect electrical wiring according to the local appropriate wiring rules. Make sure the correct voltage on the PCB has been selected prior to turning on the power. Failure to do this could damage the unit. Factory default voltage is set to 12volts DC.
- Note: If a door closer has been fitted then adjust it so that the armature closes lightly against the magnet. This will avoid damage to the magnet and will also make the door operation quieter.

MAINTENANCE

- The electro magnetic lock does not require much ongoing maintenance The customer should be advised to keep the mating faces of the armature and magnet clean making sure that no abrasive materials are used to clean the faces.
- Do not spray the magnet or armature with any chemicals such as lacquer as the release of the electro magnet may be compromised.