


DC850 + G897 (G896)

Drilling instructions


ASSA ABLOY

D001386215

Metal Doors: door installation

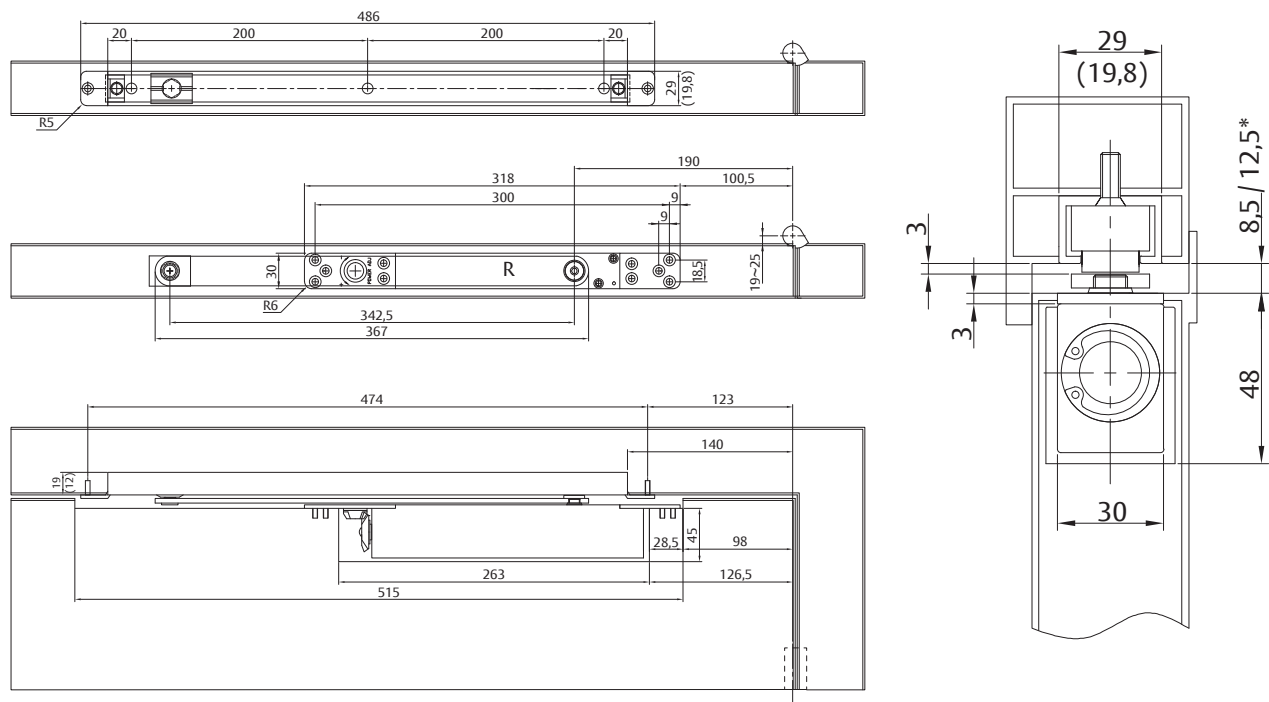


Timber Doors: door installation

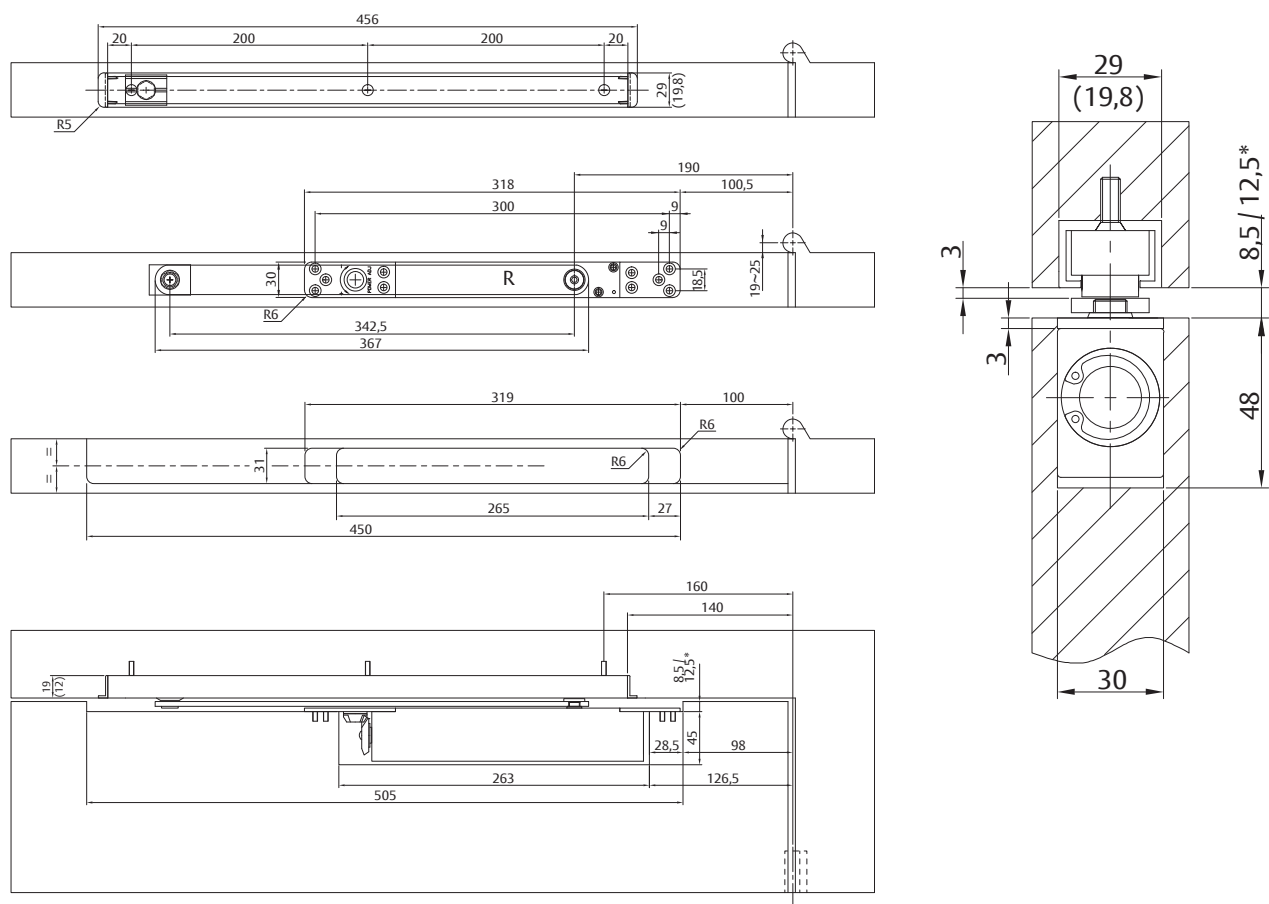


* with extended spindle

Metal Doors: frame installation

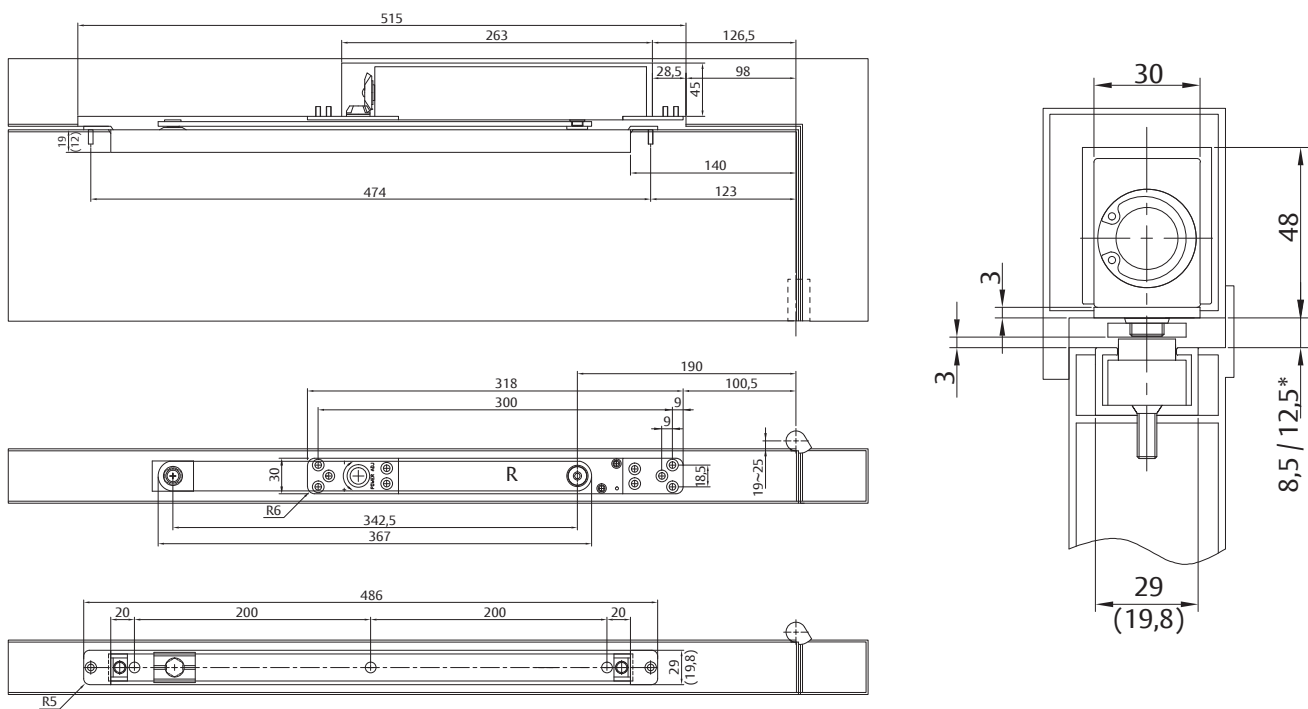

Timber Doors: frame installation

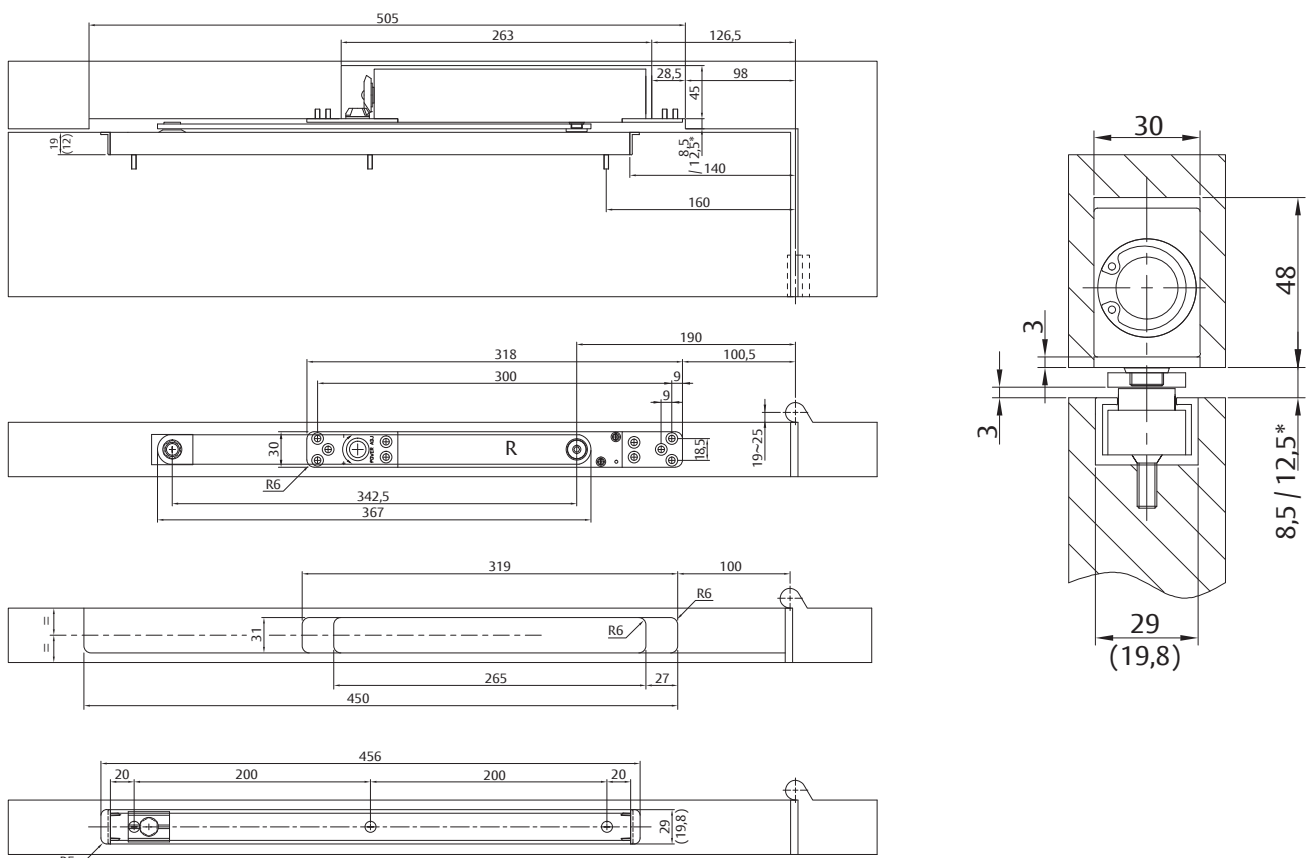

* with extended spindle