

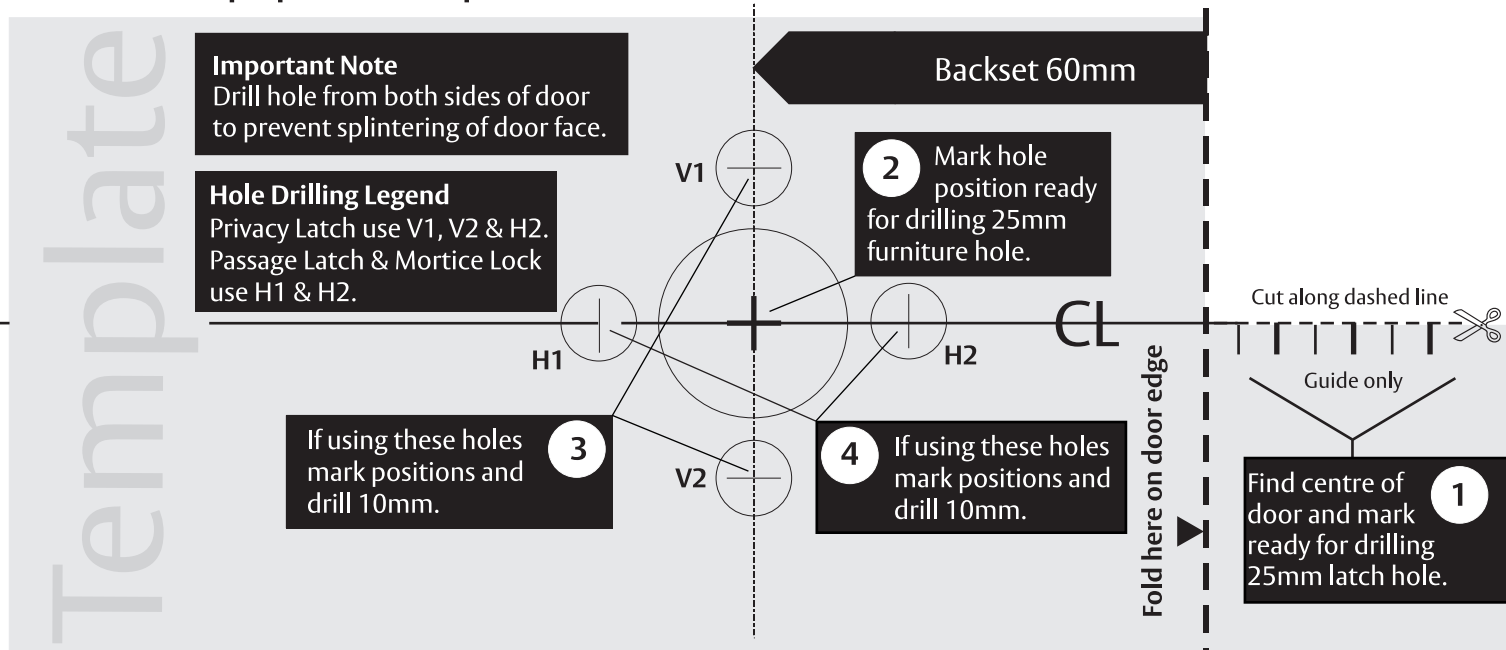


SS Rose Furniture

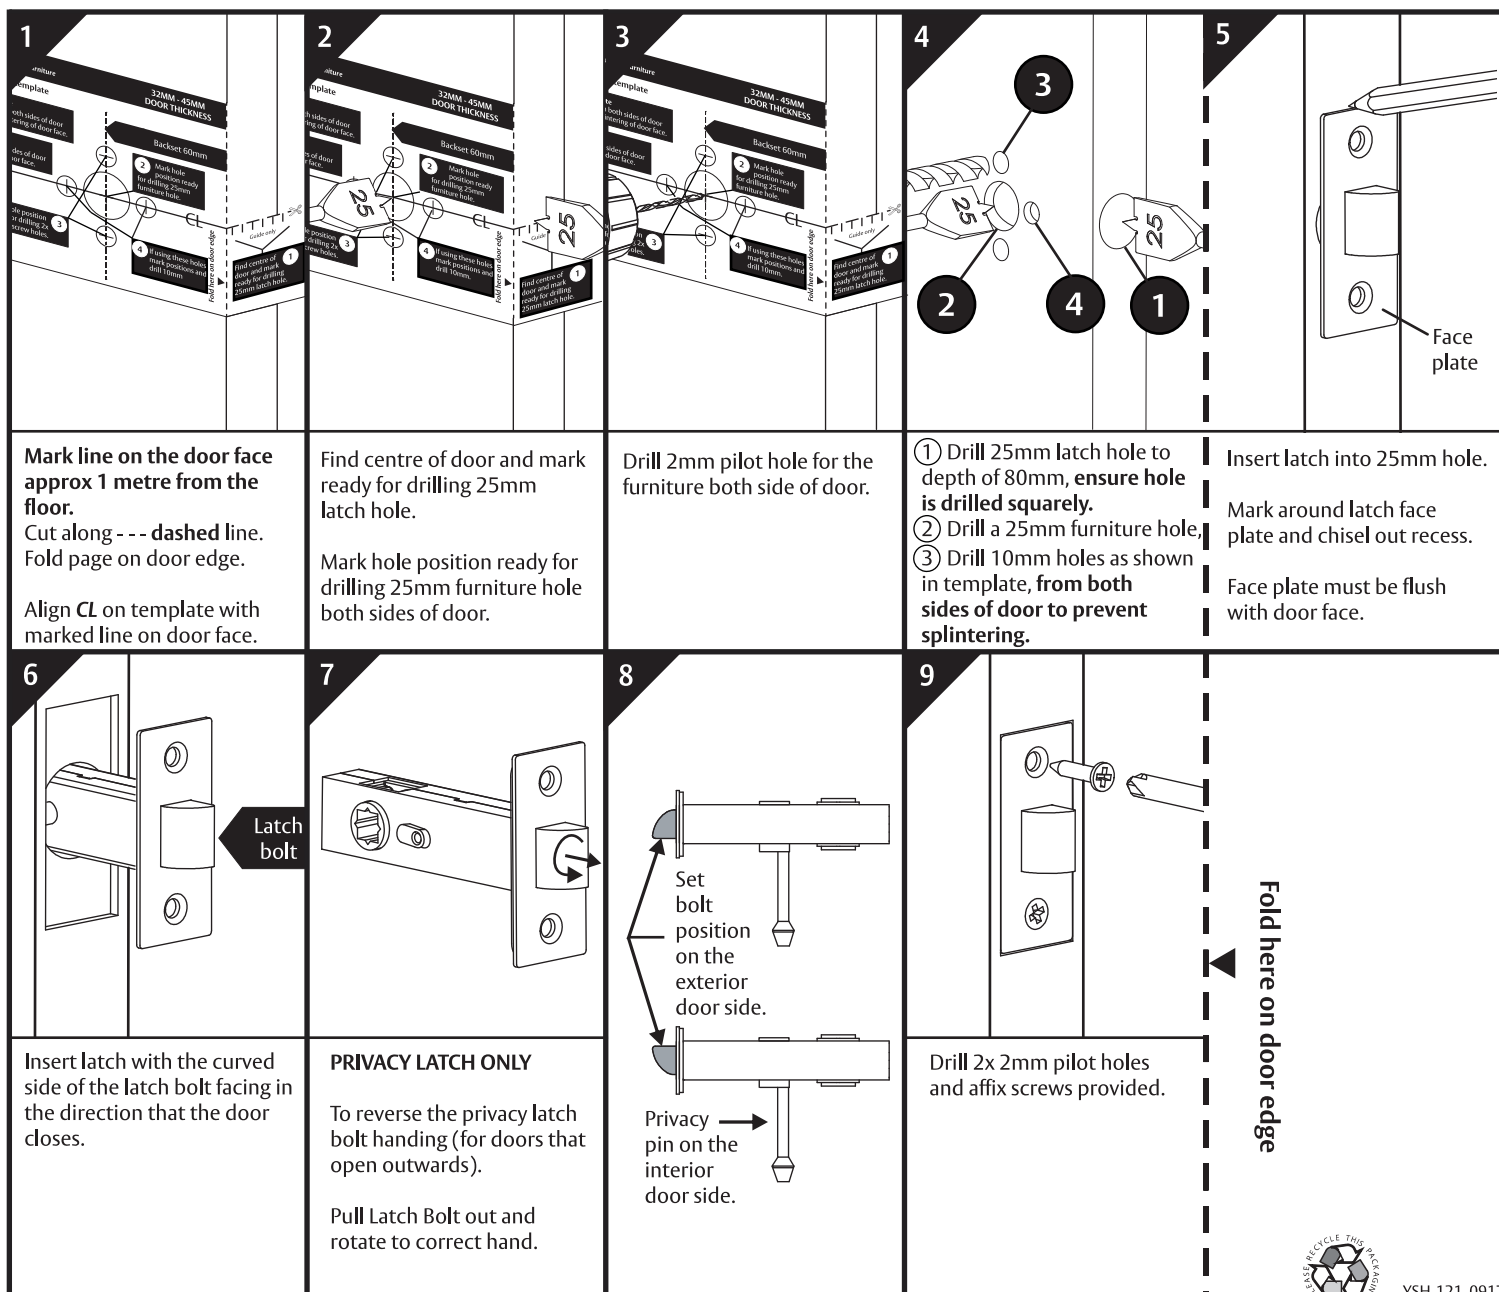
32MM - 45MM PRIVACY SET
32MM - 55MM PASSAGE SET
DOOR THICKNESS

INSTALLATION OF
PASSAGE AND
PRIVACY SET

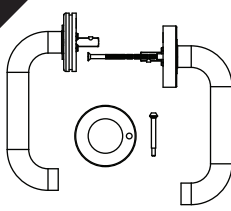
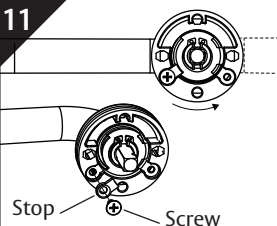
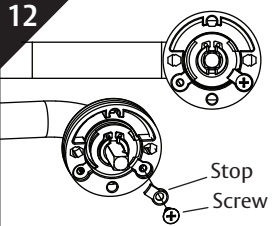
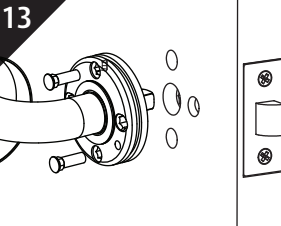
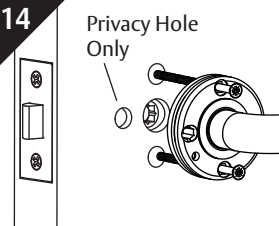
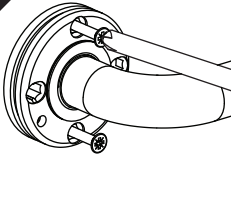
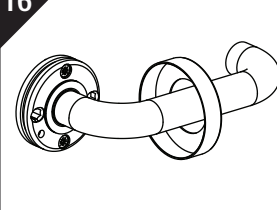
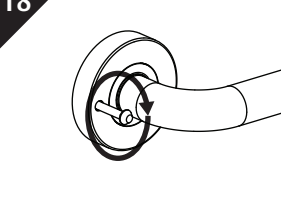
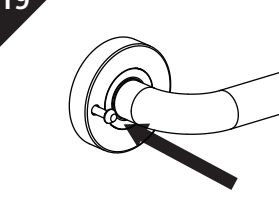
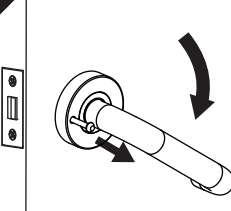
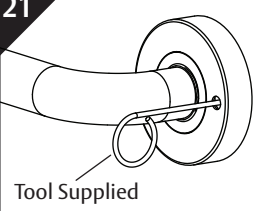
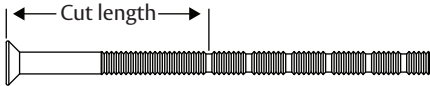
Door and latch preparation template



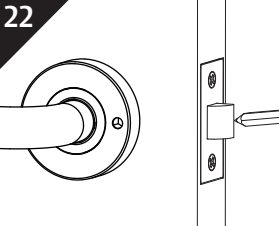
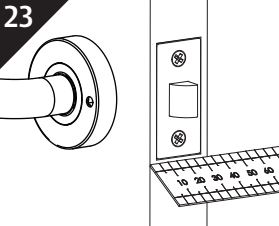
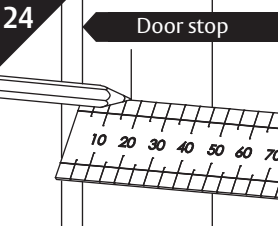
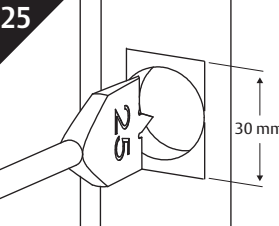
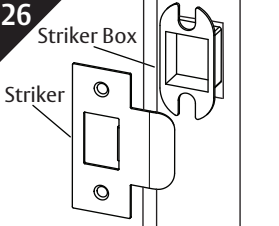
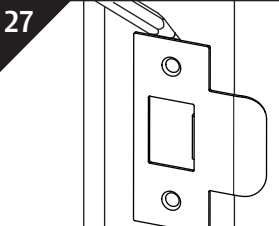
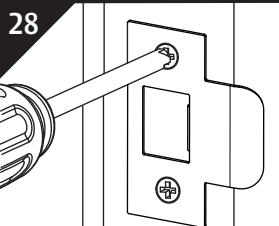
Door preparation and latch installation (steps 1-9)



Passage and Privacy set installation (steps 10 - 21)

10  PRIVACY SET (displayed) Parts and assembly	11  Stop Screw Handing the furniture is done by positioning the stop and screw in the correct location to suit the handing required.	12  Stop Screw Fixed lever is achieved by positioning the stop and screw in the location shown. To suit the handing required.	13  Position lever assembly (side with nut insert) so that it operates downward to retract the latch bolt.	14  Privacy Hole Only Align spindle into the square opening in latch, screws pass through screw holes.																	
15  Lightly tighten fixing screws. Check levers are horizontal and in line with the latch. Then firmly tighten fixing screws.	16  Pass trim over lever. Push trim to secure.	17  PRIVACY SET ONLY On the exterior side of door align emergency access holes on trim and furniture.	18  PRIVACY SET ONLY Screw in the privacy button on the interior side of door through hole in trim.	19  PRIVACY SET ONLY Depressing the privacy button will lock the (exterior) outside lever.																	
20  PRIVACY SET ONLY Rotate (interior) inside lever to release privacy lock.	21  Tool Supplied PRIVACY SET ONLY Insert and push pointed tool supplied to gain access from the (exterior) outside when the privacy button is engaged.	HAND OF DOOR ACCORDING TO ENGLISH PRACTICE <table><thead><tr><th colspan="2">DOOR OPENING IN</th><th colspan="2">DOOR OPENING OUT</th></tr></thead><tbody><tr><td>RIGHT HAND KIT</td><td>INSIDE</td><td>RIGHT HAND KIT</td><td>INSIDE</td></tr><tr><td></td><td>OUTSIDE</td><td></td><td>OUTSIDE</td></tr><tr><td>LEFT HAND KIT</td><td></td><td>LEFT HAND KIT</td><td></td></tr></tbody></table> Cut mounting screws to measured door thickness plus 13mm. 			DOOR OPENING IN		DOOR OPENING OUT		RIGHT HAND KIT	INSIDE	RIGHT HAND KIT	INSIDE		OUTSIDE		OUTSIDE	LEFT HAND KIT		LEFT HAND KIT		* FOR OUTWARD OPENING DOORS REFER TO STEP 7 & 8.
DOOR OPENING IN		DOOR OPENING OUT																			
RIGHT HAND KIT	INSIDE	RIGHT HAND KIT	INSIDE																		
	OUTSIDE		OUTSIDE																		
LEFT HAND KIT		LEFT HAND KIT																			

Strike preparation and installation (steps 22 - 27)

22  Partially close door. Mark centre of latch bolt. Mark horizontal line along the inside face of the door jamb.	23  Measure the door thickness and halve it.	24  Door stop From the door stop along the horizontal line, measure and mark a vertical line at half the door thickness.	25  30 mm At this point drill 25mm hole, 13mm deep into the door jamb. Mark 30mm x 25mm box. Then chisel out jamb to the same depth for striker box.	26  Striker Box Striker Striker and striker box to be fitted into door jamb.
27  Align strike plate centrally and vertically over this box hole. Mark around plate. Chisel out jamb to allow strike plate & box to sit flush.	28  Drill 2x 2mm pilot holes and affix screws provided.			