1. DOOR INSTALLATION

i-max

RETROFIT

Ø16
Ø25
Ø16

OPTIONAL

To improve assembly performance an extra post can be used in upper hole (requires drill).

Simpler chance is to use just a self-tappingscrew at the inside

2.INSTALLATION

CHECK HAND BEFORE INSTALLING

TORX 10

MOD.ANSI

TIGHTEN HARD

ALKALINE BATTERIES ONLY

NOT OK

OK

UP
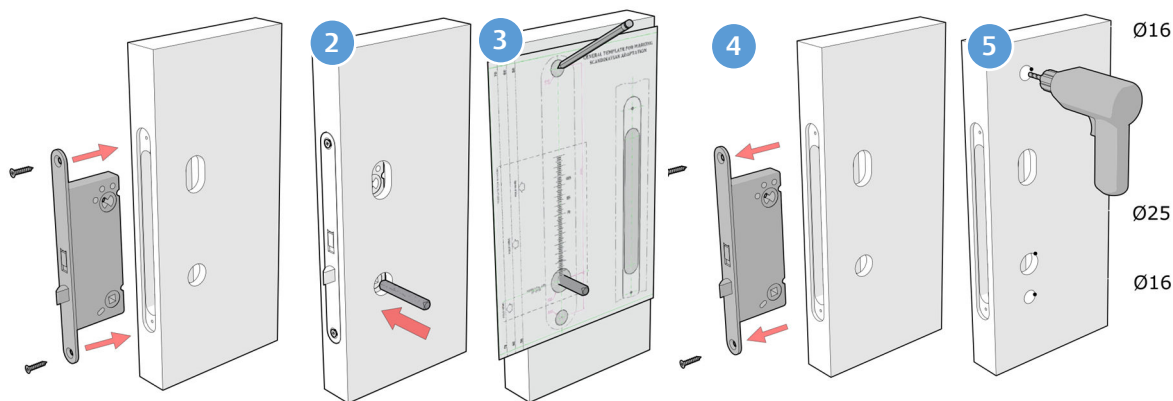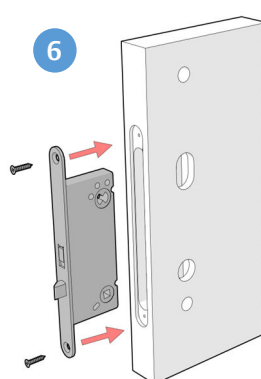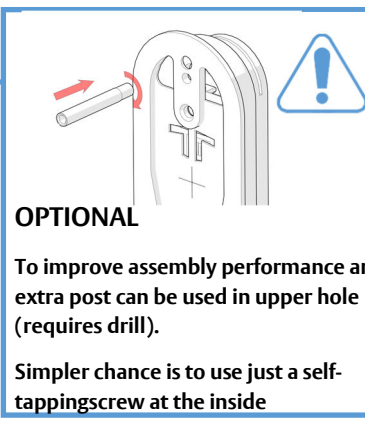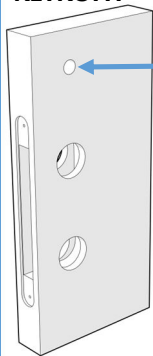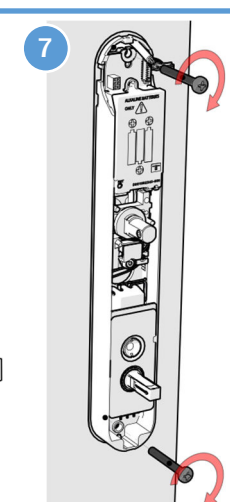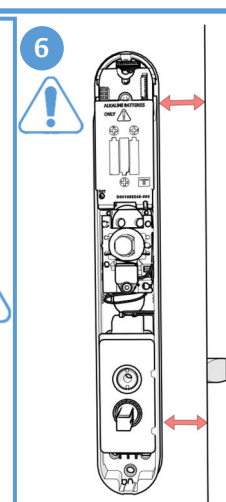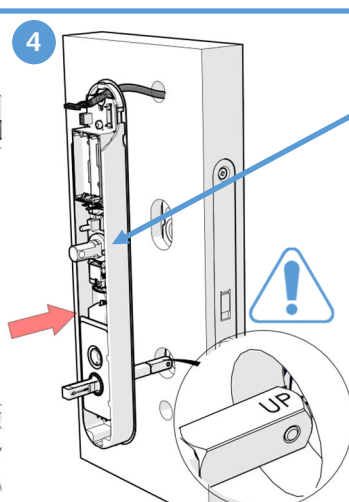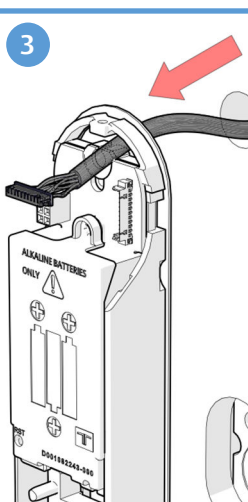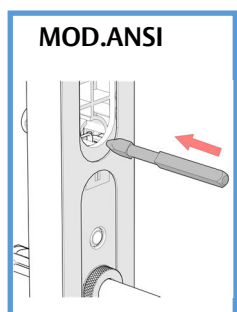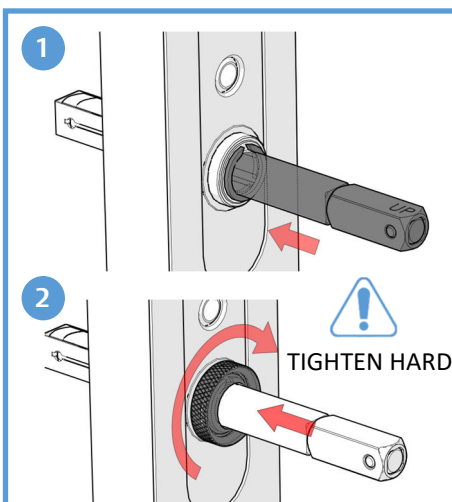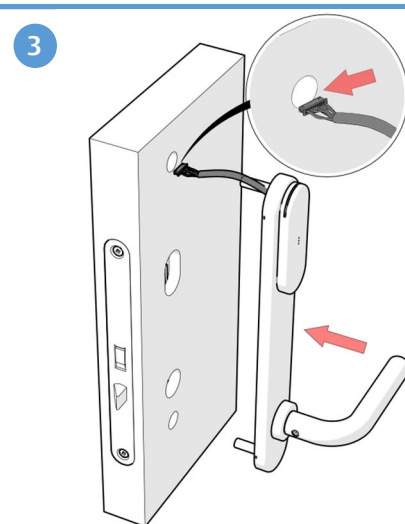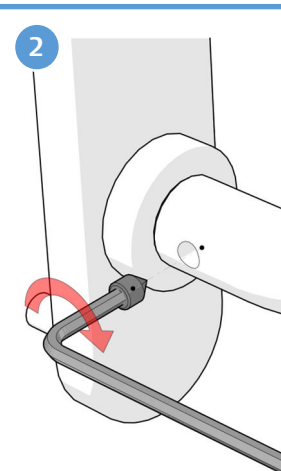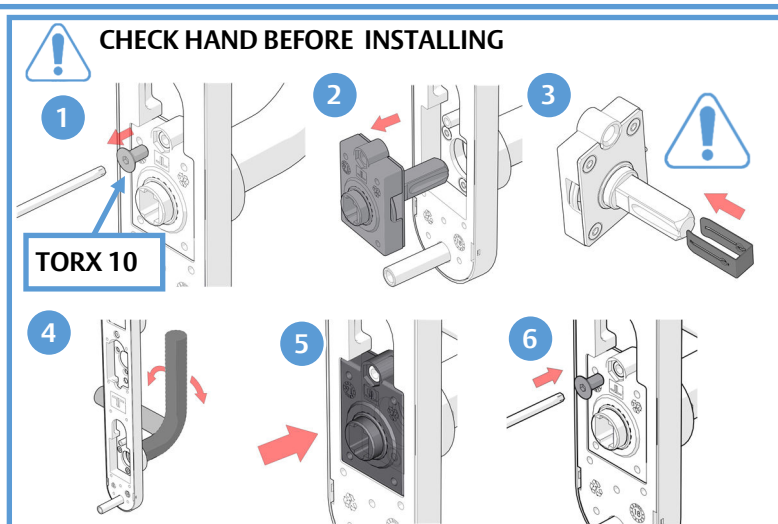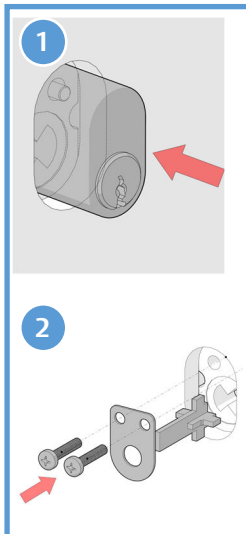
ASSEMBLING SCANDINAVIAN RETROFIT (Other operation as general installation)

CHECK HAND BEFORE INSTALLING.

1x

6x

OPTIONAL

TO IMPROVE ASSEMBLY PERFORMANCE AN EXTRA POST CAN BE USED IN UPPER HOLE (REQUIRES DRILL).

SIMPLER CHANCE IS TO USE JUST A SELF-TAPPING SCREW AT THE INSIDE.
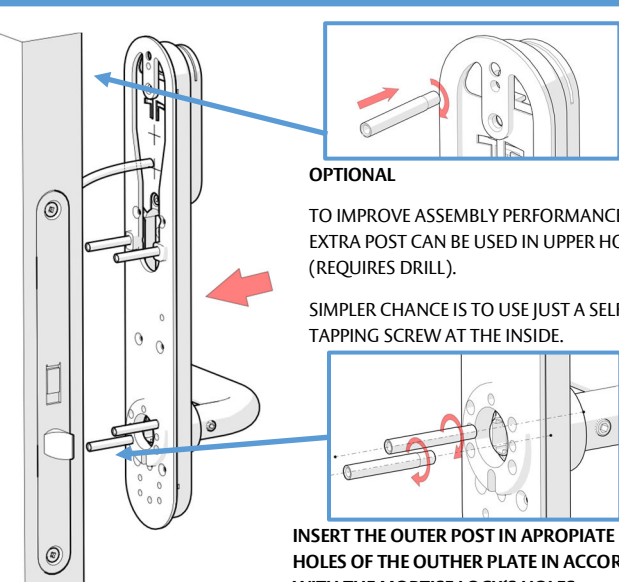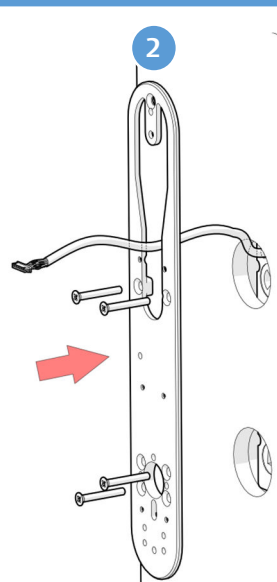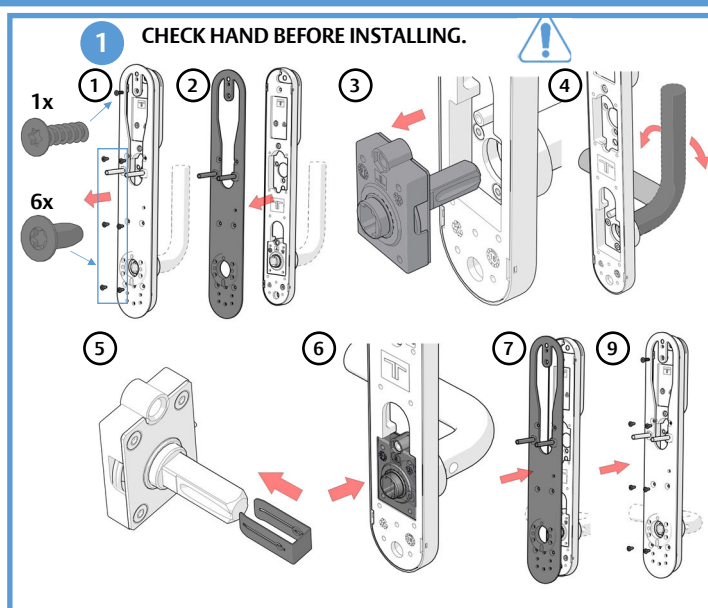
INSERT THE OUTER POST IN APROPIATE SCREWED HOLES OF THE OUTHER PLATE IN ACCORDANCE WITH THE MORTISE LOCK´S HOLES
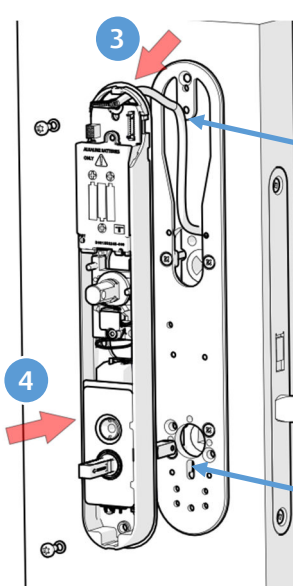
PLACE THE ANTENNA CABLE CAREFULLY BETWEEN THE INNER PLATE AND THE ELECTRONIC ESCUTCHEON, AND AVOID

¡UP!

UP

ONLY KEYPAD
ONLY WIRELESS

ALKALINE BATTERIES ONLY

UoL

WIRELESS

¡CLICK!

3. TEST

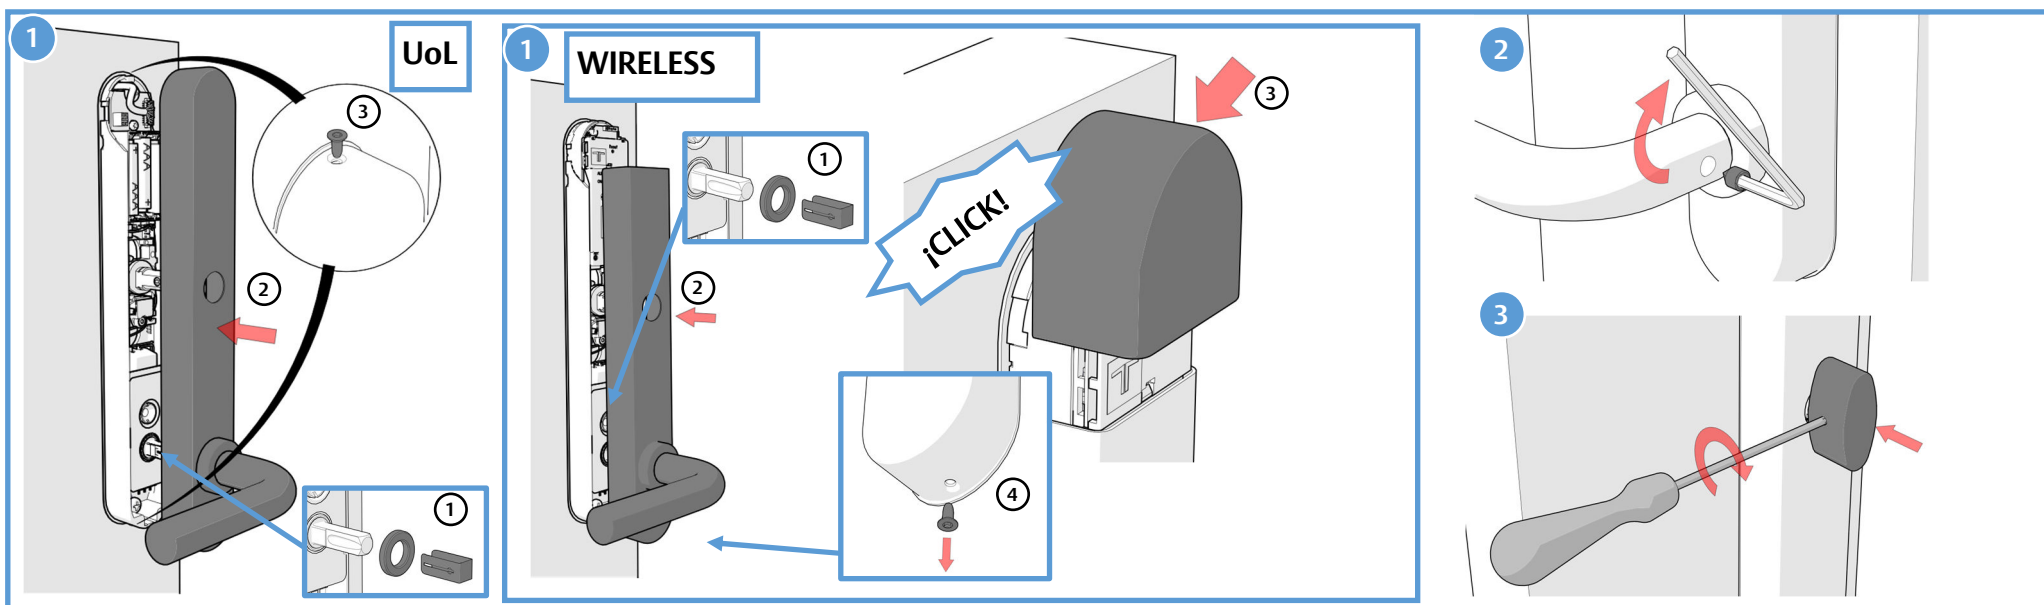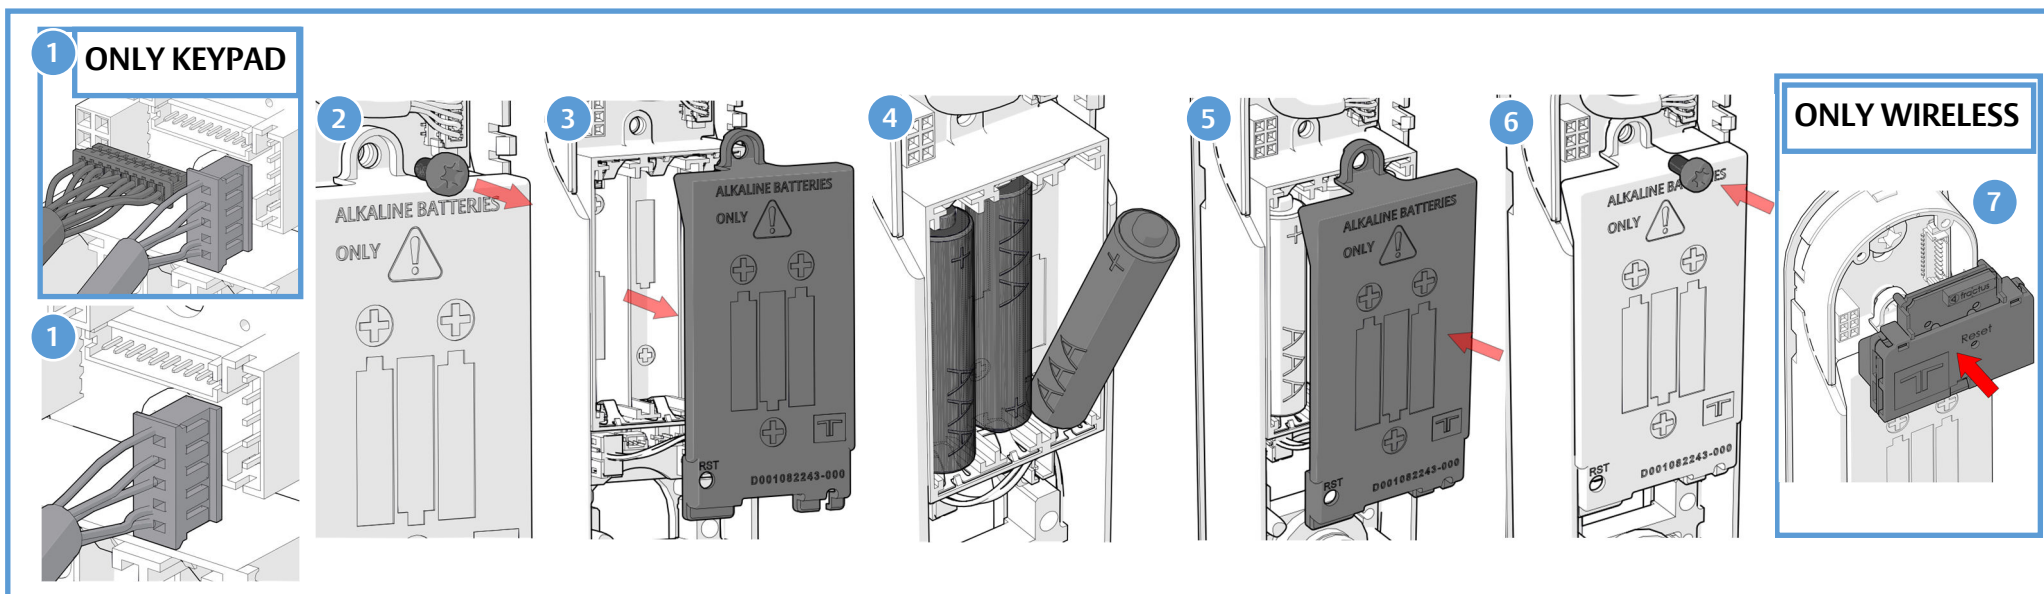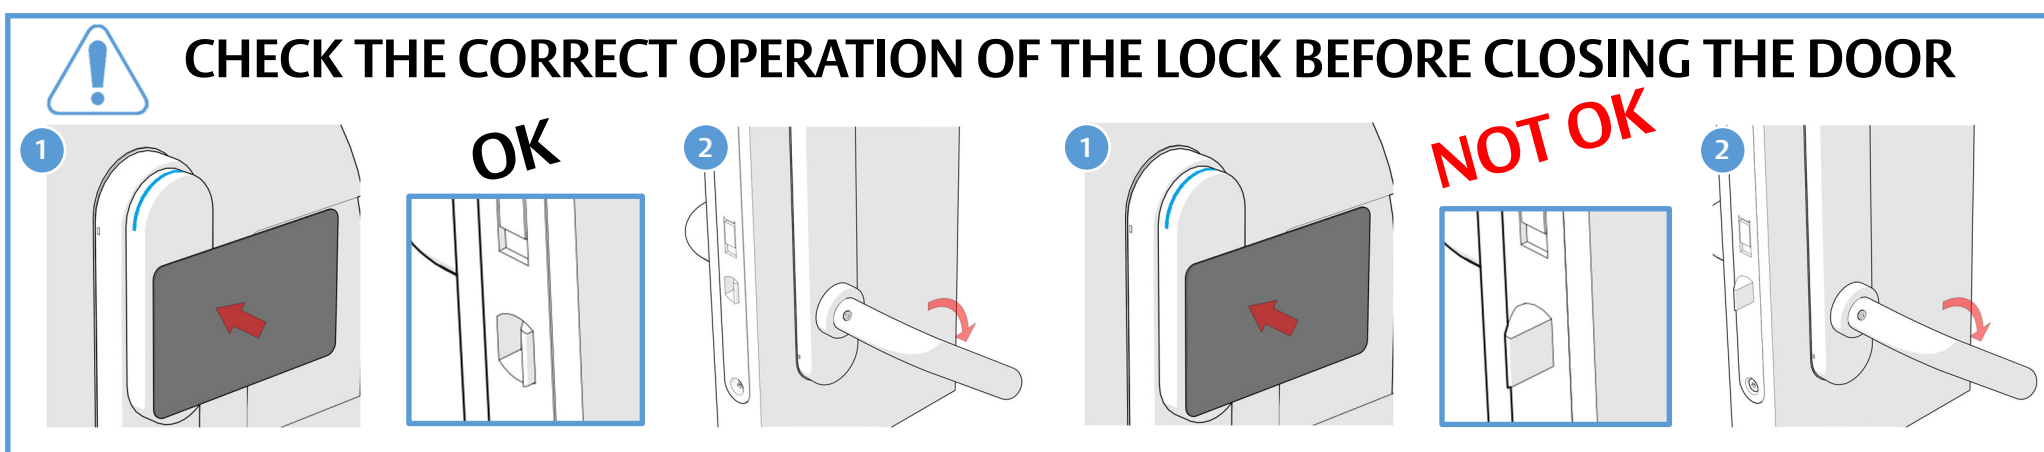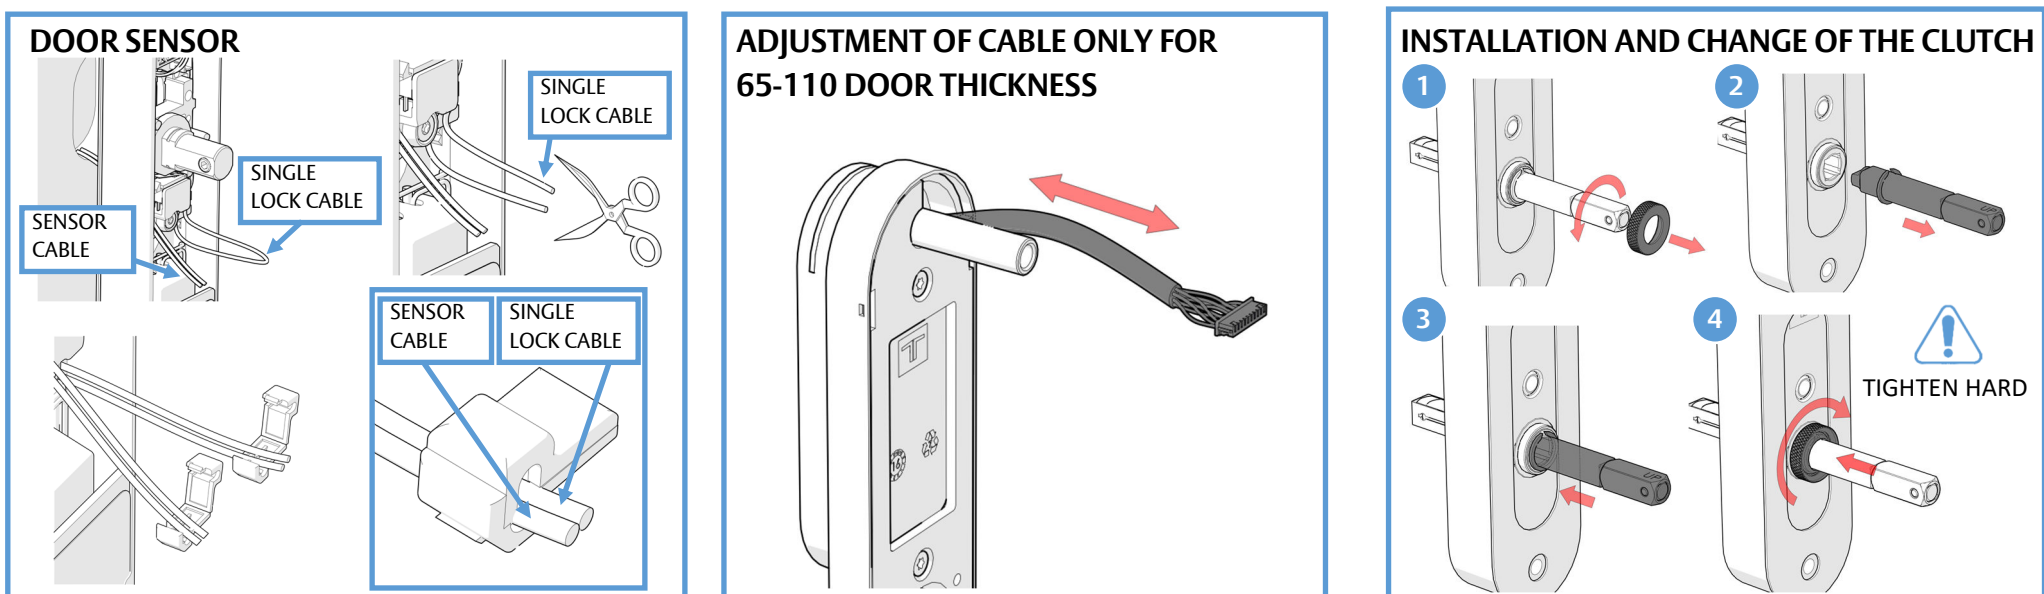**CHECK THE CORRECT OPERATION OF THE LOCK BEFORE CLOSING THE DOOR**

OK

NOT OK

4. DETAILS

DOOR SENSOR

SINGLE LOCK CABLE

SINGLE LOCK CABLE

SENSOR CABLE

SENSOR CABLE   SINGLE LOCK CABLE

ADJUSTMENT OF CABLE ONLY FOR 65-110 DOOR THICKNESS

INSTALLATION AND CHANGE OF THE CLUTCH

TIGHTEN HARD

5. MAINTENANCE

BATTERY REPLACEMENT

UoL

WIRELESS

ALKALINE BATTERIES ONLY